

Waterpark™

Attachments

Owner's Manual



Aqua Log

Aqua Launch

Aqua Slide

Slidewalk



800-659-0790

www.ravesports.com

Table of Contents

Introduction	2
Safety Rules and Information.....	4-6
Assembling Your Slide	7-8
Assembling Your Log	8-9
Assembling Your Launch	9-11
Assembling Your Slidewalk	11-12
Cleaning and Storage	12
Repairs	13
Warranty Information	14

This owner's manual contains important safety instructions and information about how to assemble, use, and care for your product. Please read entire manual before assembling or using your product. Make sure that everyone who uses the product also receives proper supervision and understands the safety instructions and warnings in this manual. Be sure to save this owner's manual for future reference and safety instructions for others.

Date Purchased: _____
Purchased from: _____

Copyright ©

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopy, recording, or any information storage and retrieval system, without permission in writing from the publisher. Requests should be mailed to RAVE Sports, 3325 Labore Rd., St. Paul, MN 55110.

Introduction

Thank you for purchasing a RAVE Sports® Waterpark™ attachment. Water sports can be safe and fun for all levels of enthusiasts. The Owner's Manual is presented to enhance your enjoyment of the sport. It is intended to alert you to some of the potentially dangerous conditions that can arise in all water sports.

Please take a few minutes to read this manual before assembling and using the product. Although the product is simple to use, this manual contains important safety information that you and all users must understand to safely enjoy the Waterpark attachments.

If you have any questions regarding this product, please call RAVE Sports at 1-800-659-0790. Please have your serial number available.



W A R N I N G

**UNSAFE USE OF THE WATERPARK
ATTACHMENTS CAN RESULT
IN PERSONAL INJURY OR DEATH.**

To reduce the risk of injury, read and follow all instructions and warnings in this manual. Do not use this product unless you understand and accept the risk of injury involved with this activity.

Safety Rules and Information

Read and understand all of the information contained in this owner's manual before assembling and using your product.

Make sure that everyone who uses the product is provided with and understands these safety rules and information.

The Waterpark attachments are designed to be used only while secured to the Aqua Jump® in large bodies of water with depths of at least 10 feet of water. Do not use or allow anyone else to use the product on land or any other hard surface or in swimming pools.

Choose a location for your product that is most protected from wind, of sufficient water depth, and free of obstructions.

Always anchor the Aqua Jump securely before it is used.

Always make sure the Waterpark attachments are attached securely to the Aqua Jump before using.

Always wear a U.S. Coast Guard approved Type III (PFD) vest when using the products.

Never use the product after sunset, before dawn, or any other time in poor lighting conditions.

Never use the product in rough surface water conditions, during storms, or when there is lightning. If an unexpected storm arises while using the product, seek shelter on shore. Do not stay on the product.

Never use the product under the influence of alcohol or drugs.

Always stay under control while using the product

Never dive off of or slide down the Waterpark attachments head first. If you choose to jump off any of the products, always enter the water feet first.

Never use the product while tired or fatigued. Use extreme caution while swimming between the shore and the product. Do not attempt to swim this distance if you are tired or fatigued.

Never swim or play under or around the Waterpark attachment.

Always inspect the areas around and under the product before each use to ensure the water is deep enough and free of all rocks, logs, sand bars, and underwater obstructions and that the product is a safe distance from above water hard objects. Ask about local water conditions before using the product in unfamiliar water.

When not in use, secure the product against unauthorized or unsupervised use.

Inspect your product for any worn, defective, or missing parts.

Do not attempt flips, somersaults or other acrobatic maneuvers on the product. Most debilitating spinal cord injuries that occur during trampoline use involve somersaults. Improper landing during a somersault

produces serious risk of broken bones, cuts, nerve damage, spinal cord or brain injury, or death.

Use the Waterpark attachment only under mature, knowledgeable adult supervision.

Not recommended for children under age six.

DO NOT OVER-INFLATE. Over inflation can cause seam rupture.



CAUTION

DO NOT USE AN AIR COMPRESSOR TO INFLATE THE WATERPARK ATTACHMENT. USE OF AN AIR COMPRESSOR MAY CAUSE OVER-INFLATION, WHICH CAN DAMAGE OR RUPTURE SEAMS.

Assembly Instructions

To assemble the Aqua Slide:


Step 1: Unpack the contents.

Lay the Aqua Slide on a flat surface. Make sure there are no sharp objects under the product that might puncture the tube.



Step 2: Inflation.

Locate the valve opening of the Aqua Slide and inflate. We recommend using the RAVE Hurricane inflator / deflator. (Part # 01000 not included).

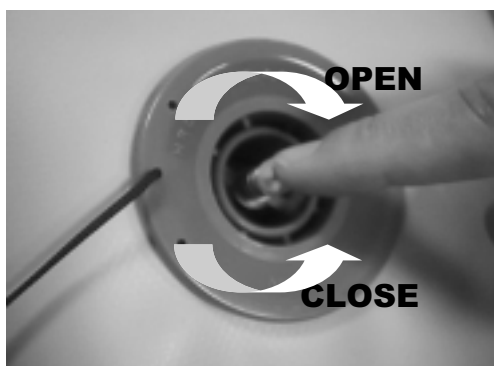

To open valve, depress stem and rotate clockwise. To close valve, depress stem and rotate counter-clockwise. The valve stem should be in the depressed position while inflating. Once inflation is complete, remove the inflator and quickly close the valve to avoid loss of pressure.

Step 3:



Inflate second tube. If tubes are not aligned properly, release some air and move tubes to align.

Step 4:

When properly inflated, the tubes on the underside of the Aqua Slide should be level with each other, as pictured.



Step 5:

Attach the product while both the Aqua Jump and Aqua Slide are in shallow water. Place the Slide on the edge of the Aqua Jump close to the frame and attach to the metal bar. The straps should be secured around the frame bars on a panel away from the valve and ladder.

Step 6:

Make sure the straps are tight and the Aqua Slide is positioned over the bars of the Aqua Jump. The Slide is now ready to use! Please read and follow all safety instructions before enjoying your slide.



To assemble the Aqua Log:

Step 1: Unpack contents

Lay the Aqua Log on a flat surface. Make sure there are no sharp objects under the product that might puncture the tube.



Step 2: Inflation

Locate valve and inflate with a RAVE Hurricane inflator / deflator (pictured but not included).

NOTE: See valve operation on page 7.



Step 3:

Locate straps on the end of the Aqua Log. Make sure the RAVE Sports logo on the other end is in the upright position. Attach product while both the Aqua Jump and Aqua Log are in shallow water.



Step 4:

Center the Log on the one side of the Aqua Jump. Run the bottom strap under the side of the Aqua Jump and the top strap over the top of the Aqua Jump. DO NOT PLACE ON THE SIDE WHERE THE VALVE IS LOCATED.



Step 5:

Before you use your Aqua Log, you need to attach at least one anchor to keep it from moving while you use it. We recommend the RAVE Sports Anchor Bag. (Part # 20346) Attach anchor line (not included) securely to the O-ring at the end of the Aqua Log and attach anchor to the anchor line.

It is normal for the air pressure within the tube to fluctuate depending on air and water temperatures. It may be necessary to increase or decrease the air pressure in your product accordingly. To avoid damage on extremely hot days it may be necessary to check and release the air pressure from your product throughout the day.

To assemble the Aqua Launch:

Step 1: Unpack contents

Lay the Aqua Launch on a flat surface. Make sure there are no sharp objects under the product that might puncture the tube.



Step 2: Inflation

Locate the valve opening of the Launch and inflate. We recommend using the RAVE Hurricane inflator / deflator. (Part # 01000 not included). Inflate the Launch 70 – 80 % of the capacity. **DO NOT FILL THE LAUNCH TO FULL CAPACITY.** You might want to experiment with the air pressure for best catapult results.

NOTE: See valve operation on page 7.

Step 3:

Locate the apron and straps on the end of the Launch. Make sure the RAVE Sports logo on the other end is in the upright position.



Step 4:

The apron flap of the Launch should spread over the top side of the Aqua Jump. Wrap the straps from the apron over the Aqua Jump tube, under the trampoline bar and past the springs to the inside of the Aqua Jump tube. Bring the bottom of the Launch straps up underneath the tube and connect to the apron straps. Tighten securely. Attach product while both the Aqua Jump and Launch are in shallow water.

NOTE: The purpose of the apron is to prevent users from slipping or falling into the space between the Launch and the Aqua Jump tube. **THE APRON IS NOT DESIGNED TO HOLD WEIGHT. DO NOT STAND ON THE APRON.**

Step 5:

Before you use your Aqua Launch, you need to attach two anchors to keep it from moving while you use it. We recommend the RAVE Sports Anchor Bag. (Part # 20346) Attach anchor line (not included) securely to the O-rings at the end of the Aqua Launch and attach anchor to the anchor line.

To assemble the Slidewalk:

Step 1: Unpack contents

Lay the Slidewalk on a flat surface. Make sure there are no sharp objects under the product that might puncture the tube.



Step 2: Inflation

Locate the valve openings of the Slidewalk tubes and inflate. We recommend using the RAVE Hurricane inflator / deflator. (Part # 01000 not included). Inflate the Slidewalk 70 – 80 % of the capacity.

NOTE: See valve operation on page 7.

Step 3:

Spread out the cover, with inside facing up, on a flat surface free from debris and sharp objects. Extend straps away from cover and place tubes in cover. Arrange tubes so that when

they are fully inflated, the cover will fit snug around the tubes. Position the tubes so the inflation valves are visible. Connect all straps leaving enough slack to allow for full inflation.

NOTE: The end cover straps must pass through the buckles located on the end of the tubes.

Inflate tubes to full capacity, making sure that the tubes are straight and aligned properly in the cover. If the tubes are not properly positioned, deflate tubes slightly and re-position, then inflate fully. Once tubes are fully inflated and positioned properly, tighten all straps.

Cleaning and Storage

- When the inflatable product is not being used, store it in a covered, shaded area. This will help protect it against ultraviolet (UV) rays and extend the life of the product.
- Clean the inflatable completely with a mild soap and fresh water. **NEVER USE PETROLEUM BASED PRODUCTS OR SOLVENTS FOR CLEANING. NEVER USE A POWER WASHER SINCE THE HIGH PRESSURE WATER JET WILL DAMAGE THE TUBE BEYOND REPAIR.**
- Product should be completely dry and remain dry while stored.
- Roll the product loosely and place in a container, preferably one that rodents can't chew through.
- Secure against unauthorized or unsupervised use.

- Store in a cool, dry location. Do not store product directly on concrete surface. Place mothballs around stored inflatable to keep mice and insects away.

.....: **Important** :.....

Rodents like muskrats may be attracted to the PVC vinyl of your product. When your product is on the water, maintaining full air pressure during periods of non-use will discourage them from chewing the vinyl. Another way to ease the problem of nuisance rodents is to remove the temptation by taking the product out of the water at night. You can also make the whole area unattractive to rodents by changing the environment, making the area less hospitable for rodents. Removing any food source from the shoreline can also be a good deterrent. Check with your local DNR for additional guidance or possible restrictions.

Repairs

For large holes, tears or seam failures, contact RAVE Sports at 1-800-659-0790. For minor holes or tears:

- Inflate the product and locate the leak by spraying the tube with mild soapy water.
- Determine the hole size and cut a patch 1-2 inches wider than the diameter of the hole. Make sure all corners of the patch are rounded.
- Deflate the product and clean the patch and area around the hole with rubbing alcohol. Let dry.
- **READ AND UNDERSTAND THE WARNINGS ON THE GLUE CONTAINER.**
- Apply glue to the patch and the area around the hole. Let the glue dry until it is tacky to the touch.

Lifetime Warranty

The Lifetime Warranty set forth below is given by RAVE Sports, Inc. with respect to product(s) purchased and used in the United States and internationally.

RAVE Sports' reinforced PVC product(s), when delivered to you in a new condition in original container, are warranted against defects in material or workmanship for life so long as the product remains the possession of the original owner. Defective product(s) returned to RAVE Sports or authorized service location and proven to be defective upon inspection, will be repaired or exchanged for new product(s) or part(s) where applicable. The warranty period for any replacement product shall be consistent with the terms of the Lifetime Warranty.

When returning any product under this Lifetime Warranty, you must first contact RAVE Sports to obtain a return authorization number. The product must be packaged in its original carton with a copy of the bill of sale (or invoice of purchase), together with a complete explanation of the problem. Shipping charges, if any, must be prepaid. Products covered by this Lifetime Warranty will be returned to you without charge by RAVE Sports.

This Lifetime Warranty covers all defects encountered in normal use of the product and does not apply in the following cases:

- a) Loss or damage to the product is due to abuse; mishandling; alteration; accident; failure to follow operating, maintenance or storage instructions; service performed by a party other than RAVE Sports' authorized service personnel; or any acts of God, including storm or animal damage.
- b) The product has had its serial number(s) or dating altered or removed.
- c) Wear and tear from normal use and weathering.

No implied warranty (or condition), including any implied warranty (or condition) of merchantability or fitness for a particular purpose, applies to the product after the applicable period of express warranty stated above, and no other express warranty or guaranty, except as mentioned above, given by any person, firm, or corporation with respect to the product shall bind RAVE Sports. (Some states or provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you).

RAVE Sports shall not be liable for loss of revenue or profit, failure to realize savings or other benefits, or for any other special, incidental or consequential damages caused by the use, misuse or inability to use the product regardless of the legal theory on which the claim is based, and even if RAVE Sports has been advised of the possibility of such damages. Nor shall recovery of any kind against RAVE Sports be greater in amount than the purchase price of the product sold by RAVE Sports and causing the alleged damage.

Without limiting the foregoing, you assume all risk and liability for loss, damage or injury to you and your property and to others and their property arising out of the use, misuse, or inability to use any product sold by RAVE Sports not caused directly by the negligence of RAVE Sports, (Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you). This Lifetime Warranty shall not extend to anyone other than the original purchaser of any product, or the person for whom it was purchased as a gift.

This Lifetime Warranty gives you specific legal rights, and you may have other rights which vary from state to state or province to province.